



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | <</[≡o] |  | << / Tune- |
|  | >>/[≡?] |  | >> / Tune+ |
|  | I<</[≡+] |  | I<< / Preset- |
|  | >>I/[≡..] |  | >>I / Preset+ |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | [≡i] |  | Smart / List |
|  | Text |  | Text / Goto |
|  | Subtitle |  | Subtitle / EQ |
|  | Freeze |  | Shift + Pause / Step / Freeze |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | Info |  | Info / Angle |
|  | []/Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Source |  | AV / Input / RDS |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | EPG |  | Guide / EPG / -/- |
|  | Exit |  | Exit / Cancel / Clear |
|  | Vol+ |  | Vol+ |
|  | FAV |  | Fav / Marker / PC |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | REP/Rec |  | Rec / Rec Mode |
|  | CH- |  | CH- / Page- |
|  | 1 |  | 1 |







Originalfernbedienung Ersatzfernbedienung

| | | |
|-----------|---|-----------------------|
| Power |  | Power |
| Mute |  | Mute / Dimmer |
| Play |  | Play / Slow |
| Pause |  | Pause / Step / Freeze |
| Stop |  | Stop / Hold |
| Rec |  | Rec / Rec Mode |
| <</Hold |  | << / Tune- |
| >>/Index |  | >> / Tune+ |
| I<< |  | I<< / Preset- |
| >>I |  | >>I / Preset+ |
| Nicam/A2 |  | Audio / Lang I/II |
| Subtitle |  | Subtitle / EQ |
| Subpage |  | Eject / Surround |
| Size |  | Zoom / Size |
| Sleep |  | Sleep / Timer |
| DTV/Radio |  | TV/Radio / |
| Reveal |  | D.Menu / Top |

Originalfernbedienung Ersatzfernbedienung

| | | |
|---------|---|-----------------------|
| TXT/MIX |  | Text / Goto |
| Menu |  | Menu / Home |
| Up |  | Up |
| Info |  | Info / Angle |
| Left |  | Left |
| Enter |  | OK |
| Right |  | Right |
| Cancel |  | Exit / Cancel / Clear |
| Down |  | Down |
| Back |  | Back / Return |
| Vol+ |  | Vol+ |
| List |  | Smart / List |
| CH+ |  | CH+ / Page+ |
| Vol- |  | Vol- |
| Mode |  | Display / Media |
| CH- |  | CH- / Page- |
| 1 |  | 1 |






 














Originalfernbedienung Ersatzfernbedienung

| | | |
|------------|---|-----------------------|
| Power |  | Power |
| Mute |  | Mute / Dimmer |
| Play |  | Play / Slow |
| Pause |  | Pause / Step / Freeze |
| Stop |  | Stop / Hold |
| Rec |  | Rec / Rec Mode |
| <</[Timer] |  | << / Tune- |
| >>/[≡?] |  | >> / Tune+ |
| I<</[≡⇅] |  | I<< / Preset- |
| >>I/[≡...] |  | >>I / Preset+ |
| Audio |  | Audio / Lang I/II |
| Subtitle |  | Subtitle / EQ |
| I<</[≡⇅] |  | Zoom / Size |
| <</[Timer] |  | Sleep / Timer |
| Text |  | Text / Goto |
| Source/Av |  | AV / Input / RDS |
| [II] |  | Menu / Home |

Originalfernbedienung Ersatzfernbedienung

| | | |
|--------|---|-----------------------|
| Up |  | Up |
| Info |  | Info / Angle |
| Left |  | Left |
| Ok |  | OK |
| Right |  | Right |
| Exit |  | Exit / Cancel / Clear |
| Down |  | Down |
| Recall |  | Back / Return |
| Vol+ |  | Vol+ |
| [≡i] |  | Smart / List |
| Ch+ |  | CH+ / Page+ |
| Vol- |  | Vol- |
| Ch- |  | CH- / Page- |
| 1 |  | 1 |
| 2 |  | 2 |
| 3 |  | 3 |
| 4 |  | 4 |



