



 





 



 

 

 





 


 

 

 

 
 


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|--|------------------------|
|  | POWER |  | Power |
|  | INFO |  | Info / Angle |
|  | HDMI CONTROL |  | Smart / List |
|  | SLEEP |  | Sleep / Timer |
|  | SCREEN |  | Picture / Format |
|  | SOURCE |  | AV / Input / RDS |
|  | PRESETS |  | Setup / OPT / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | ZOOM/RED/▲ |  | Zoom / Size |
|  | ZOOM/RED/▲ |  | Shift + CH+ / |
|  | ZOOM/RED/▲ |  | Red / Netflix / Search |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | REPEAT/GREEN/▼ |  | Shift + CH- / |

Page-

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------------|
|  | REPEAT/GREEN/▼ |  | Green / APP / Repeat |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | ROOT/YELLOW |  | Yellow / YouTube / Repeat |
|  | RETURN |  | Back / Return |
|  | 0 |  | 0 |
|  | MENU |  | Menu / Home |
|  | TITLE/BBLUE |  | Sound / Title |
|  | TITLE/BBLUE |  | Blue / Prime Video / Random |
|  | UP |  | Up |
|  | LEFT |  | Left |
|  | OK/SELECT |  | OK |
|  | RIGHT |  | Right |
|  | DOWN |  | Down |
|  | P+ |  | CH+ / Page+ |
|  | P- |  | CH- / Page- |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|--|-------------------------|
| | V- | | Vol- |
| | V+ | | Vol+ |
| | FAV | | Fav / Marker / PC |
| | LANG | | Audio / Lang I/II |
| | SUBTITLE | | Subtitle / EQ |
| | MUTE | | Mute / Dimmer |
| | SWAP/↔ | | Shift + Back / Return |
| | EPG | | Guide / EPG / -/-- |
| | [*] / [..] | | D.Menu / Top |
| | TEXT | | Text / Goto |
| | C | | Exit / Cancel / Clear |
| | DISPLAY | | Display / Media |
| | ANGLE | | Shift + Info / Angle |
| | SEARCH MODE | | Shift + Red / Netflix / |
| | REC | | Rec / Rec Mode |
| | STOP | | Stop / Hold |
| | PLAY | | Play / Slow |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------|--|-----------------------|
| | PAUSE | | Pause / Step / Freeze |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | I<< | | I<< / Preset- |
| | >>I | | >>I / Preset+ |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

