



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	CEC		Smart / List
	?		D.Menu / Top
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Vol+		Vol+
	Source		AV / Input / RDS
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------	-----------------------	---------------------

[P]	PR-	[CH PAGE]	CH- / Page-
[Left Arrow]	<	[PRESET-]	<< / Preset-
[Right Arrow]	>	[PRESET+]	>> / Preset+
[Left Arrow]	<<	[TUNE-]	<< / Tune-
[Right Arrow]	>>	[TUNE+]	>> / Tune+
[Red Dot]	Rec	[REC MODE]	Rec / Rec Mode
[Play Arrow]	Play	[SLOW]	Play / Slow
[Pause]	Pause	[STEP-FREEZE]	Pause / Step / Freeze
[Stop]	Stop	[HOLD]	Stop / Hold
[Image]	[<>]	[FORMAT PICTURE]	Picture / Format
[Image]	Dialog	[LANG I/II]	Audio / Lang I/II
[Image]	[...]	[EQ]	Subtitle / EQ
[TV/Radio]	Tv/Radio	[PROGRAM TV/RADIO]	TV/Radio /
[My Media]	My Media	[MEDIA DISPLAY]	Display / Media

