




























 











Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|------------------|
|  | Power |  | Power |
|  | Source |  | AV / Input / RDS |
|  | Sleep |  | Sleep / Timer |
|  | Picture Mode |  | Picture / Format |
|  | Sound Mode |  | Sound / Title |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | FAV+ |  | Shift + Up |
|  | 0 |  | 0 |
|  | FAV- |  | Shift + Down |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|------------------------|
|  | Exit |  | Exit / Cancel / Clear |
|  | Up |  | Up |
|  | FAV |  | Fav / Marker / PC |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | EPG |  | Guide / EPG / -/-- |
|  | Vol+ |  | Vol+ |
|  | Audio |  | Audio / Lang I/II |
|  | P+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Mute |  | Mute / Dimmer |
|  | P- |  | CH- / Page- |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |



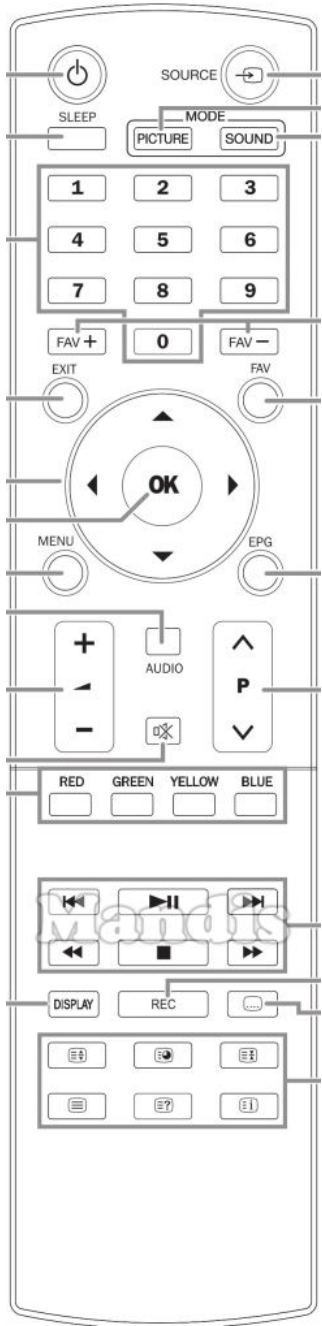 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|------------|---------|----------------|-----------------------------|
| YELLOW | Yellow | REPEAT A-B | Yellow / YouTube / Repeat |
| BLUE | Blue | RANDOM | Blue / Prime Video / Random |
| | I<< | | I<< / Preset- |
| | Pause | | Pause / Step / Freeze |
| | Play | | Play / Slow |
| | >>I | | >>I / Preset+ |
| | << | | << / Tune- |
| | Stop | | Stop / Hold |
| | >> | | >> / Tune+ |
| | Display | | Display / Media |
| | Rec | | Rec / Rec Mode |
| | [...] | | Subtitle / EQ |
| | [≡◆] | | Zoom / Size |
| | [≡○] | | Eject / Surround |
| | [≡+] | + | Shift + Stop / |
| | [≡] | | Text / Goto |
| | [≡?] | | Info / Angle |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------|--|--------------|
| | [≡i] | | Smart / List |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

