 

 


 

 

 

 



 

 

 

 

 








 





Originalfernbedienung Ersatzfernbedienung

 

 



 


 











	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	PR+		Ch +
	PR-		Ch -
	CH List		List
	Content		Smart
	Menu		Menu
	Guide		Guide
	Info		Info
	Tools		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Exit		Exit
	Red/A		Red
	Green/B		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Yellow/C	 Yellow		
 Blue/D	 Blue		
 Internet TV	 TV/R		
 Media.P	 Media		
 Dual I-II	 Dual		
 AD	 Shift + Subt		
 P.Size	 Format		
 Subt.	 Subt		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

