


 

 

 
 
 
 

 
 



 
 
 
 

 

 
 
 
 


 
 





 
 


 



 


 

 
 

 
 


 
 
 

 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	↔		Pre Ch
	Back		Back
	Menu		Menu
	Netflix		Media
	Internet		Smart
	Ok		Ok

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute
	i		Info
	Exit		Exit
	Source		AV
	Q.Menu		D. Menu
	EPG		Guide
	TXT		Text
	*		Format
	*/Q		3D





Originalfernbedienung    Ersatzfernbedienung

	[>]		Options
	Lang		Dual
	Subt.		Subt
	[+]		Shift + Format
	TV		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<
	>>		>>

Originalfernbedienung    Ersatzfernbedienung