 

 

 
 

 

 
 




 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Portal/Energy Saving		Sleep / Timer
	[]/Ratio		Picture / Format
	Input		AV / Input / RDS
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Fav		Fav / Marker / PC
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	PR-/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Settings		Setup / OPT /
	Info/Home		Info / Angle
	Q.Menu/3D		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

EXIT	Exit	CLEAR EXIT CANCEL	Exit / Cancel / Clear
[Red]	Red	NETFLIX SEARCH	Red / Netflix / Search
[Green]	Green	APP REPEAT	Green / APP / Repeat
[Yellow]	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
[Blue]	Blue	Prime Video RANDOM	Blue / Prime Video / Random
TEXT	Text	GOTO TEXT	Text / Goto
T.OPT	T.Opt	SHIFT + OPT-TOOLS SETUP	Shift + Setup / OPT / Tools
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
[Stop]	Stop	HOLD [Stop]	Stop / Hold
[Play]	Play	SLOW [Play]	Play / Slow
[Pause]	Pause	STEP-FREEZE [Pause]	Pause / Step / Freeze
[Tune-]	<<	TUNE- [Tune-]	<< / Tune-
[Tune+]	>>	TUNE+ [Tune+]	>> / Tune+
Simplink	Simplink	MEDIA DISPLAY	Display / Media
AD	AD	LANG I/II AUDIO	Audio / Lang I/II
REC	Rec	REC MODE [REC]	Rec / Rec Mode
MY APPS	My APPS	SHIFT + APP REPEAT	Shift + Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

