



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	DVB		Smart
	[/=]		Options
	[=]		Text
	[=O]		Subt
	[=◆]/FAV-		AV
	[=+]/FAV+		Dual
	[=X]/EPG		Guide
	[=?]/Radio		TV/R
	Red/PP		Red
	Green/♪		Green
	Yellow/[]		Yellow
	Blue		Blue
	[++]		3D
	≡i		Info
	Menu		Menu
	DVB Menu		Media
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	PIP		Format
	Recall		Pre Ch
	Zap		Back
	Freeze		Pause
	←AV		Shift + AV
	AV→		Shift + Format
	16:9		D. Menu





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Zoom		Eject				
	S/M/D	 + 	Shift + Text				
	PC		>>				
	TV		<<				
	DVI		I<<				
	YPbPr		>>I				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

