
 
 
 


 


 

 
 

 

 

 
 




 







 



 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	[i]/Info		Info
	Mute		Mute
	I-II		Dual
	OK/Select		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-/+10	 + 	Shift + Guide
	Exit		Exit

**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio		Yellow
	Blue/Angle		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<





 
 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	>>		>>
	[TV]		TV/R
	D-Menu		Smart
	TV		Media
	AV		AV
	P<P		Pre Ch
	PP		D. Menu
	[≡]		Text
	[≡o]		Subt
	[≡+]		Format
	[≡x]		3D
	[≡◆]/Wide	+	Shift + Format
	[≡?]		Options
	[≡i]/Guide		Guide
	[::]/Subtitle		Back




**Originalfernbedienung Ersatzfernbedienung**








 

 










	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/+10		Guide
	Exit		Exit
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio		Shift + Yellow
	Blue/Angle		Blue

**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop
	Play		Play
	Pause		Pause
	D-Menu		Smart
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Time		Shift + AV
	Zoom		Shift + Eject
	Program		Sleep
	Search Mode		AV
	Repeat		Text
	A-B		Shift + Play
	C		Yellow
	Title		Info
	Display		Shift + Info





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Open/Close		Eject
	Menu		Menu
	Select		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

