




 





 









 

 


 
 

 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	TV		TV/R
	Menu		Menu
	Q.Menu		D. Menu
	World		Shift + Guide

 
 
 
Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	Back		Back
	Mute		Mute
	i		Info
	Guide		Guide
	[≡]/Text		Text
	Folder		Format
	[-O-]		Subt





Originalfernbedienung Ersatzfernbedienung

	* / O	PROG SLEEP	Sleep
	* / Q	ZOOM ▲	Eject
	Netflix	APP MEDIA	Media
	Camera-Music-Ph	SETTINGS OPT	Options
	YouTube	ECO 3D	3D
	[≡]..	DISC.NAV LIST	List
	Lang	SOUND DUAL	Dual
	Red	A	Red
	Green	B	Green
	Yellow	C	Yellow
	Blue	D	Blue
	Play	PLAY MODE	Play
	Rec	REC MODE	Rec
	Pause		Pause
	>>	>>	>>
	<<	<<	<<
	Stop	■	Stop

Originalfernbedienung Ersatzfernbedienung

