


 
 

 
 

 



 
 
 
 
 
 
 

 
 
 
 



 


 
 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/R
	I/II/Auto		3D
	Mute		Mute
	EPG		Guide
	FAV		Pre Ch
	Audio		Dual
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung




 
 



 

 

	0		0
	-/--		Shift + Guide
	Recall/Last View		Back
	Sleep		Sleep
	Source		AV
	Exit		Exit
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Aspect		Format




Originalfernbedienung Ersatzfernbedienung

	Display		Info
	CH+		Ch +
	CH-		Ch -
	Text		Text
	Index		Media
	Rec		Rec
	Pause		Pause
	Play		Play
	Stop		Stop
	<</Hold		<<
	>>/Subpage		>>
	I<</Size		I<<
	>>I/Cancel		>>I
	Eject		Eject
	A-B/Mix		List
	Repeat/Reveal		Shift + Text
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	D.Menu		D. Menu
	Setup		Options
	D.Disp		Smart

