


 

 
 

 
 
 

 
 
 
 
 

 
 
 
 
 
 
 


 

 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	LIB		List
	Mute		Mute
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop
	Timers		Sleep
	Guide		Guide
	Back		Back
	Text		Text
	Info		Info
	OK		Ok
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	PR+		Ch +
	PR-		Ch -
	VOL+		Vol +
	VOL-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7



