



























 





















 

 







 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Auto		Smart / List
	Mute		Mute / Dimmer
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	I/II/Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--	 + 	Shift + Guide / EPG / -/--
	0		0



 


Originalfernbedienung Ersatzfernbedienung

	Back		Back / Return
	Sleep		Sleep / Timer
	Aspect	 + 	Shift + Picture / Format
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Red/Eject		Eject / Surround
	Red/Eject		Red / Netflix / Search
	Green/D.Menu		D.Menu / Top
	Green/D.Menu		Green / APP / Repeat
	Yellow/Setup		Yellow / YouTube / Repeat
	Yellow/Setup		Setup / OPT /
	Blue/D.Disp		Blue / Prime Video / Random
	Display		Display / Media






Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Vol+		Vol+
	Media		Shift + Display / Media
	CH+		CH+ / Page+
	Vol-		Vol-
	Rec		Rec / Rec Mode
	CH-		CH- / Page-
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	Subtitle		Subtitle / EQ
	Tv/Radio		TV/Radio /
	Play		Play / Slow
	Text		Text / Goto
	Stop/Index		Stop / Hold
	A-B		Shift + Yellow / YouTube /
	<</Hold		Shift + Stop /

Hold

Originalfernbedienung Ersatzfernbedienung

	<</Hold		<< / Tune-
	>>/Subpage		>> / Tune+
	Repeat/Reveal		Shift + Green / APP /
	I<</Size		Zoom / Size
	I<</Size		I<< / Preset-
	>>I/Cancel		Shift + Exit / Cancel / Clear
	>>I/Cancel		>>I / Preset+

