

 





 













 











 































 





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS		OK		OK
	Power		Power		Right		Right
	TV		TV/ Radio /		Back		Back / Return
	TV		Shift + 1		Down		Down
	Quick		D. Menu / Top		Exit		Exit / Cancel / Clear
	[□]		Display / Media		Red		Red / Netflix / Search
	List		Smart / List		Green		Green / APP / Repeat
	Vol +		Vol +		Yellow		Yellow / YouTube / Repeat
	AD		Audio / Lang I/II		Blue		Blue / Prime Video / Random
	P+		CH+ / Page+		1		1
	Vol -		Vol -		2		2
	Mute		Mute / Dimmer		3		3
	P-		CH- / Page-		4		4
	Menu		Menu / Home		5		5
	Up		Up		6		6
	Guide		Guide / EPG / -/-		7		7
	Left		Left		8		8





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	9		9
	[i +]		Info / Angl e
	0		0
	Recal l		Fav / Märker / PC
	<< / [≡+]		<< / Tune-
	Pl ay		Pl ay / Sl ow
	>> / [≡◇]		>> / Tune+
	l << / [≡?]]		l << / Preset-
	St op		St op / Hol d
	>> / [o] / [≡X]		>> / Preset +
	Rec		Rec / Rec Mbde
	Pause/ St ep		Pause / Step / Freeze
	Text		Text / Got o

Originalfernbedienung	Ersatzfernbedienung

