 
 
 
 
 

 
 
 
 



 

 




 
 
 









Originalfernbedienung Ersatzfernbedienung

|   |            |   |        |
|---|------------|---|--------|
|    | Power      |    | Power  |
|    | 3D         |    | 3D     |
|    | Input Tv   |    | TV/R   |
|    | Input AV   |    | Media  |
|    | Menu       |    | Menu   |
|    | Exit       |    | Exit   |
|    | [≡]/Text   |    | Text   |
|    | [≡◆]/STTL  |    | Subt   |
|    | [+]/Aspect |    | Format |
|   | i          |   | Info   |
|  | APPS       |  | Sleep  |
|  | Home       |  | Smart  |
|  | Guide      |  | Guide  |
|  | Up         |  | Up     |
|  | Down       |  | Down   |
|  | Right      |  | Right  |
|  | Left       |  | Left   |

 
 



 
 
Originalfernbedienung Ersatzfernbedienung

|   |             |   |         |
|---|-------------|---|---------|
|    | OK          |    | Ok      |
|    | Option      |    | Options |
|    | Back/Return |    | Back    |
|    | Red         |    | Red     |
|    | Green       |    | Green   |
|    | Yellow      |    | Yellow  |
|    | Blue        |    | Blue    |
|    | Vol+        |    | Vol +   |
|    | Vol-        |    | Vol -   |
|   | Mute        |   | Mute    |
|  | PR+         |  | Ch +    |
|  | PR-         |  | Ch -    |
|  | 1           |  | 1       |
|  | 2           |  | 2       |
|  | 3           |  | 3       |
|  | 4           |  | 4       |
|  | 5           |  | 5       |





Originalfernbedienung Ersatzfernbedienung

|   |           |   |        |
|---|-----------|---|--------|
|    | 6         |    | 6      |
|    | 7         |    | 7      |
|    | 8         |    | 8      |
|    | 9         |    | 9      |
|    | 0         |    | 0      |
|    | ?/Help    |    | Dual   |
|    | Last View |    | Pre Ch |
|    | <<        |    | <<     |
|    | Play      |    | Play   |
|    | >>        |    | >>     |
|    | I<<       |    | I<<    |
|  | Pause     |  | Pause  |
|  | >>I       |  | >>I    |
|  | Stop      |  | Stop   |
|  | Rec       |  | Rec    |
|   |           |   |        |
|   |           |   |        |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

