 






 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	[+]		D. Menu
	[> <]		Format
	A/B		Pre Ch
	EPG [I]		Shift + Options
	[i+]		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Return		Shift + Back

Originalfernbedienung Ersatzfernbedienung

	Tools		Options
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	Text		Text
	Back		Back
	0		0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

	9		9
DIGITAL	Digital	SEARCH TV/R	TV/R
ANALOG	Analog	DISC NAV LIST	List
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

