 



 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 
 
 
 

 
 


 

 
 

 
 

 

 
 

 
 
 


 
 
 
 
 
 
 





 
 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Repeat		Text
	Play		Play
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Disc Menu		D. Menu
	Info/Menu		Info
	Back		Back
	Home		Smart
	Title/Popup		Options
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow





Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	Power Tv	+	Shift + Power
	Input Tv	AV	AV
	Vol-		Vol -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

