 

 

 

 

 

 

 
 








 

 









Originalfernbedienung Ersatzfernbedienung

	Standby		Shift + Power
	On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		Guide / EPG / -/--
	Dimmer		Mute / Dimmer
	Display		Display / Media
	Tuning-		<< / Tune-
	Channel/Control+		CH+ / Page+
	Tuning+		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Band		Smart / List
	Enter		OK
	Menu		Menu / Home
	A-Preset/A-Tune		Setup / OPT /
	Channel/Control-		CH- / Page-
	Shift		Back / Return
	A/B		Red / Netflix / Search
	C/D		Green / APP / Repeat
	E/F		Yellow / YouTube / Repeat
	G/H		Blue / Prime Video / Random
	I/J		Fav / Marker / PC
	T-Mode		Info / Angle
	Sleep		Sleep / Timer
	Timer		Shift + Sleep / Timer
	Memo		Text / Goto

