

 
 

 
 


 
 

 

 


 

 
 
 
 


 




 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Tv/DVD		TV/R
	PIP		3D
	*		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	[...]/Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	O)/Audio		Dual
	Rec		Rec
	Camera/Angle		Options
	Play		Play
	Stop		Stop
	Pause/Step		Pause
	<< Scan		<<
	Scan >>		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Menu/List		Menu
	Up/PR+		Up
	Setup		D. Menu
	Down/PR-		Down
	Right		Right
	Left		Left
	OK		Ok



