






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV	 + 	Shift + Pre Ch
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -

 
 







 
 







 



 



 





 
Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Subtitle		Subt
	Audio		Dual
	EPG		Guide
	Goto		Sleep
	Repeat	 + 	Shift + Text
	CH List		List
	ECO/TFT Off		Media
	Play List		Smart
	Mute		Mute
	Exit		Exit
	Menu		Menu
	Input		AV











Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Picture	 + 	Shift + Format
	16:9/4:3		3D
	Sound		D. Menu
	Play		Play
	Pause/TS		Pause
	Record		Rec
	Stop		Stop
	<<		<<
	TV/TXT		Text
	>>		>>
	Hold		Options
	I<<		I<<
	Size		Format
	Subpage	 + 	Shift + Subt
	>>I		>>I
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue/Sleep		Blue

