 
 


 

 





 
 
 

 
 
 



 



 


 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Title/TTX		Text

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Prog/EPG		Sleep
	Display		Info
	Goto		Pre Ch
	PBC		Options
	Setup		D. Menu
	Return		Back
	Source		AV
	Tv/Radio		TV/R
	Play		Play
	Stop		Stop
	Pause		Pause
	<</Rev		<<
	>>/Fwd		>>
	I<</Prev		I<<
	>>I/Next		>>I
	Up		Up





Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right/Fav+		Right
	Left/Fav-		Left
	Enter		Ok
	3D		3D
	Subtitle		Subt
	Zoom	+	Shift + Eject
	Mode		Smart
	Digest		Blue
	Language		Dual
	L/R		Media
	P/N		Red
	Repeat	+	Shift + Text
	A-B		Yellow
	Angle		Green
	Slow		Format

Originalfernbedienung Ersatzfernbedienung

