



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Hold		Stop / Hold
	♪		Sound / Title
	Sub		Subtitle / EQ
	16:9		Picture / Format
	TV/TX		TV/Radio /
	Double		D.Menu / Top
	[ ]		Setup / OPT /
	Mix		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down









 







Originalfernbedienung Ersatzfernbedienung

	Swap		Back / Return
	Vol+		Vol+
	PP		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0





**Originalfernbedienung Ersatzfernbedienung**

	Violet	 FAV MARKER	Fav / Marker / PC
	Red	 NETFLIX SEARCH	Red / Netflix / Search
	Green	 APP REPEAT	Green / APP / Repeat
	Yellow/Timer	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM	Blue / Prime Video / Random
	Update		Shift + OK
	Reveal		Shift + Back / Return
	P100		Shift + 0

**Originalfernbedienung Ersatzfernbedienung**