


 

 

 

 

 



 

 
 
 

 

 



 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +



 






 




 
 
 
 
 
 
 

Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Source		AV
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	List/Rec		List
	USB/Media		Media
	SOS/Help		Options
	EPG/Guide		Guide
	I-I/Goto		Smart
	Rec		Rec









Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Play		Play
	Pause		Pause
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Red/Timer		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	4:3/16:9		Format
	Subt.		Subt
	Lang		Dual
	Sleep		Sleep
	Zoom		Eject
	Text		Text

Originalfernbedienung Ersatzfernbedienung

	✓		TV/R
	Recall		Back

