

 
 

 













 

 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/Input Select		AV
	-/--		Guide
	Vol+		Vol +
	Vol-		Vol -
	Tracking/V-Lock+		Ch +



 
 

 













 

 








 



Originalfernbedienung Ersatzfernbedienung

	Tracking/V-Lock-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Prog/Check+		Shift + 1
	Prog/Check-		Shift + 4
	Date+		Shift + 2
	Date-		Shift + 5
	On+		Shift + 3
	On-		Shift + 6
	Off+		Shift + 9
	Off-		Shift + Pre Ch



 


 


 
 




























Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Tv/Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	AV/Input Select		AV
	Tracking/V-Lock+		Ch +
	Tracking/V-Lock-		Ch -
	Vol+		Vol +

Originalfernbedienung    Ersatzfernbedienung

	Vol-		Vol -
	Replay		Options
	OSD/Display		Info
	Search		TV/R
	Showview		Media
	Direct Tv Rec		Smart
	I<< Index		I<<
	Index >>I		>>I
	Rec		Rec
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	>>		>>
	<<		<<
	OK		Ok
	Up		Up
	Down		Down





