



 

 





 
 
 

 
 
 
 




 

 
 
 

 




 
 
 
 

 
 

 
 
 


 

 

 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DTV/VCR		Smart
	Mute		Mute
	Menu		Menu
	Info		Info
	EPG		Guide
	Play		Play
	Pause		Pause
	Exit		Exit
	OK		Ok
	Up		Up
	CH+		Ch +
	CH-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Rec List		List
	Favorite		Pre Ch
	Game		Media
	Recall		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	Audio		Dual



