

 


 



 

 


 


 
 
 
 

 
 
 











Originalfernbedienung Ersatzfernbedienung

|   |            |   |       |
|---|------------|---|-------|
|    | Open/Close |    | Eject |
|    | Dimmer     |    | Media |
|    | 1          |    | 1     |
|    | 2          |    | 2     |
|    | 3          |    | 3     |
|    | 4          |    | 4     |
|    | 5          |    | 5     |
|    | 6          |    | 6     |
|    | 7          |    | 7     |
|   | 8          |   | 8     |
|  | 9          |  | 9     |
|  | 0          |  | 0     |
|  | Cancel     |  | Exit  |
|  | Prog       |  | Sleep |
|  | Edit       |  | Smart |
|  | Time       |  | AV    |
|  | Repeat     |  | Text  |

Originalfernbedienung Ersatzfernbedienung

|   |        |   |         |
|---|--------|---|---------|
|    | Recall |    | Back    |
|    | Random |    | Options |
|    | AMS    |    | Dual    |
|    | A-B    |    | TV/R    |
|    | Stop   |    | Stop    |
|    | Play   |    | Play    |
|    | I<<    |    | I<<     |
|    | >>I    |    | >>I     |
|    | <<     |    | <<      |
|   | >>     |   | >>      |
|  | Pause  |  | Pause   |
|  | Vol+   |  | Vol +   |
|  | Vol-   |  | Vol -   |
|   |        |   |         |
|   |        |   |         |
|   |        |   |         |
|   |        |   |         |
|   |        |   |         |

