












 





 





 



 



 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|--------------------------|
|  | Power |  | Power |
|  | SD/HC |  | Shift + Display / Media |
|  | Input TV |  | Shift + AV / Input / RDS |
|  | Input AV |  | AV / Input / RDS |
|  | Aspect |  | Picture / Format |
|  | Menu |  | Menu / Home |
|  | N |  | Shift + Up |
|  | Direct Tv Rec |  | D.Menu / Top |
|  | i |  | Info / Angle |
|  | Exit |  | Exit / Cancel / Clear |
|  | Viera Tools |  | Smart / List |
|  | Viera Link |  | Display / Media |
|  | Up |  | Up |
|  | Guide |  | Guide / EPG / -/-- |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------------|
|  | Option |  | Setup / OPT / |
|  | Down |  | Down |
|  | Return |  | Back / Return |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Text |  | Text / Goto |
|  | [≡♦]/Sttl |  | Subtitle / EQ |
|  | [≡i]/Index |  | Shift + Info / Angle |
|  | [≡+]/Hold |  | Shift + Stop / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |



