



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		MUTE
	TV		VOD
	Tv/Rad		TV/R
	Audio		Audio
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		TEXT
	Sub		Subt.
	EPG		-/-- / EPG
	Menu		MENU
	Exit		EXIT
	ALT		MEDIA
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	OK		OK
	CH+		CH +
	CH-		CH -
	Vol+		VOL +
	Vol-		VOL -
	Freeze		Pause
	Browse		OPT+
	Page+		Fast Forward
	Page-		Rewind



