


 



 
 


 



 



 



 

 









 

 

 














 


 

 



 



 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 4	 4
 Source	 AV	 5	 5
 Rec	 Rec	 6	 6
 Play	 Play	 7	 7
 Pause	 Pause	 8	 8
 Stop	 Stop	 9	 9
 Lang	 Dual	 0	 0
 <<	 <<	 Tv	 TV/R
 >>	 >>	 Back	 Shift + Back
 Text	 Text	 Up	 Up
 Red	 Red	 Down	 Down
 Green	 Green	 Right	 Right
 Yellow	 Yellow	 Left	 Left
 Blue	 Blue	 OK	 Ok
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 BACK	 Back





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Q.MENU	D. Menu		
O	Options		
Music/Photo	Eject		
*/o	Subt		
*/Search	Sleep		
Tv List	List		
i	Info		
[≡]	Guide		
Size	Format		
Vol+	Vol +		
Vol-	Vol -		
PR+	Ch +		
PR-	Ch -		
Mute	Mute		

