

 




 
 
 








Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	HOME		Smart
	SKIP PREV.		I<<
	SKIP NEXT		>>I
	PLAY		Play
	PAUSE		Pause
	STOP		Stop
	EJECT		Eject
	FWD		>>
	REW		<<
	BACK		Back
	FAV		Pre Ch
	INFO		Info
	SETTINGS		Options
	UP		Up
	DOWN		Down
	RIGHT		Right

Originalfernbedienung Ersatzfernbedienung

	LEFT		Left
	OK		Ok
	VOL+		Vol +
	VOL-		Vol -
	MUTE		Mute
	SEARCH		TV/R
	PAGE UP		Ch +
	PAGE DOWN		Ch -

