










 





 




 

 




 
 





Originalfernbedienung Ersatzfernbedienung

|   |          |   |        |
|---|----------|---|--------|
|    | Power    |    | Power  |
|    | Mute     |    | Mute   |
|    | 1        |    | 1      |
|    | 2        |    | 2      |
|    | 3        |    | 3      |
|    | 4        |    | 4      |
|    | 5        |    | 5      |
|    | 6        |    | 6      |
|    | 7        |    | 7      |
|   | 8        |   | 8      |
|  | 9        |  | 9      |
|  | 0        |  | 0      |
|  | Tv/Radio |  | TV/R   |
|  | ←PR      |  | Back   |
|  | EPG      |  | Guide  |
|  | Menu     |  | Menu   |
|  | FAV      |  | Pre Ch |

Originalfernbedienung Ersatzfernbedienung




|   |                |   |        |
|---|----------------|---|--------|
|    | Exit           |    | Exit   |
|    | PR+            |    | Ch +   |
|    | PR-            |    | Ch -   |
|    | Vol+           |    | Vol +  |
|    | Vol+           |    | Right  |
|    | Vol-           |    | Vol -  |
|    | Vol-           |    | Left   |
|    | OK/List        |    | Ok     |
|    | ↑              |    | Up     |
|   | ↓              |   | Down   |
|  | Pause          |  | Pause  |
|  | Red/Find       |  | Red    |
|  | Green/Zoom     |  | Green  |
|  | Yellow/TXT     |  | Yellow |
|  | Blue/Audio L/R |  | Blue   |
|  | SAT            |  | Media  |
|  | Tv/AV          |  | AV     |





Originalfernbedienung

Ersatzfernbedienung

| Originalfernbedienung   | Ersatzfernbedienung |
|---|---------------------|
|  | PROG SLEEP Sleep    |
|  | ECO 3D 3D           |
|  | DISPLAY INFO Info   |
|   |                     |
|   |                     |
|   |                     |
|   |                     |
|   |                     |
|   |                     |
|   |                     |
|   |                     |
|   |                     |
|   |                     |
|   |                     |
|   |                     |
|   |                     |
|   |                     |
|   |                     |

Originalfernbedienung

Ersatzfernbedienung

| Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |

