


 

 




 
 
 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	Input 5		Shift + 5
	PC		Fav / Marker / PC
	[I+]/[I-]		Setup / OPT /
	[<>]		Picture / Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8




 











 

Originalfernbedienung Ersatzfernbedienung

	9		9
	[i+]/Timer		Info / Angle
	[i+]/Timer		Sleep / Timer
	0		0
	HDMI Control		Smart / List
	P+		CH+ / Page+
	I-II		Audio / Lang I/II
	Vol+		Vol+
	P-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Return		Back / Return
	Up		Up
	Home Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[...]		Subtitle / EQ
	[≡?]		D.Menu / Top
	[≡i]		Display / Media
	[≡]		Text / Goto

Originalfernbedienung Ersatzfernbedienung

