 
 
 




Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sleep	 Sleep
 Mute	 Mute
 Recall	 Back
 Menu	 Menu
 Exit	 Exit
 Up / CH +	 Up

Originalfernbedienung	Ersatzfernbedienung
 Down / CH -	 Down
 Right	 Right
 Vol +	 Vol +
 Left	 Left
 Vol -	 Vol -
 OK	 Ok
 Pg Up	 Ch +
 Pg Dn	 Ch -
 Tv/Radio	 TV/R
 Info	 Info
 FAV	 Pre Ch
 Audio	 Dual
 Sub-T	 Subt
 TTX	 Text
 EPG	 Guide
 Digest	 Options
 Play	 Play





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Stop		Stop
	Rec		Rec
	Red		Red
	<<		<<
	Green		Green
	>>		>>
	Yellow		Yellow
	List		List
	I<<		I<<
	>>I		>>I
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

