
 




Originalfernbedienung Ersatzfernbedienung


 

 

 










 
 




 
	Power		Power
	[+]		Format
	Source		AV
	<</>		<<
	Play		Play
	Pause		Pause
	>/>/>>		>>
	Stop		Stop
	Sync Menu		Menu
	Theatre		Media
	Digital		TV/R
	Analog		D. Menu
	Scene		3D
	Audio		Dual
	Guide		Guide
	[i+]/[?]		Info
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Return		Back
	Options		Options
	Home		Smart
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6




**Originalfernbedienung Ersatzfernbedienung**

	7		7
	8		8
	9		9
	0		0
	Text		Text
	♥		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Prog+		Ch +
	Prog-		Ch -
	[...]		Subt

**Originalfernbedienung Ersatzfernbedienung**