



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	i		Info / Angle
	Input Select		AV / Input / RDS
	Picture Size		Zoom / Size
	1		1
	2		2
	3		3
	Ch + / Page +		CH+ / Page+
	4		4
	5		5
	6		6
	Ch - / Page -		CH- / Page-
	7		7
	8		8
	9		9
	Vol +		Vol+
	Sleep		Sleep / Timer








 
Originalfernbedienung Ersatzfernbedienung

	0		0
	Mute		Mute / Dimmer
	Vol -		Vol-
	Menu		Menu / Home
	Up		Up
	Text / Mix / TV		Text / Goto
	TV		TV/Radio /
	Left		Left
	Enter		OK
	Right		Right
	Audio		Audio / Lang I/II
	Down		Down
	Exit		Exit / Cancel / Clear
	Freeze / Hold		Stop / Hold
	Freeze / Hold		Pause / Step / Freeze
	Quick View / Sub Page		Display / Media
	F / T / B		Smart / List





Originalfernbedienung Ersatzfernbedienung

	Skip / Reveal		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

