













 

 





















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red / ↑		Red / Netflix / Search
	Green / ↓		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	M		Menu / Home
	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Source		AV / Input / RDS
	Presets		D.Menu / Top
	Info		Info / Angle
	EPG		Guide / EPG / -/--
	Vol+		Vol+


 





 


Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Shift + Fav / Marker / PC
	0		0
	Recall		Fav / Marker / PC
	Screen		Picture / Format





Originalfernbedienung Ersatzfernbedienung

 LANG	Lang	 LANG I/II AUDIO	Audio / Lang I/II
 SUBTITLE	Subtitle	 EQ SUBTITLE	Subtitle / EQ
 SLEEP	Sleep	 TIMER SLEEP	Sleep / Timer
 (O)	(O)	 MEDIA DISPLAY	Display / Media
 O/World	O/World	 LIST SMART	Smart / List
 [≡x]	[≡x]	 PROGRAM TV/ RADIO	TV/Radio /
 [≡]	[≡]	 GOTO TEXT	Text / Goto

Originalfernbedienung Ersatzfernbedienung

