






 
 






 



 
 
 
 
 
 
 

 
 
 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	Audio		Dual
	Source		AV
	List		List
	EPG		Guide

Originalfernbedienung Ersatzfernbedienung

	Info/[≡i]		Info
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Recall		Pre Ch
	Home		Shift + Smart
	≡		Shift + Media
	Internet		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Radio/Audio+		TV/R



