 




 
 


 
 

 

 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|--------|
|  | Power |  | Power |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | PR+ |  | Ch + |
|  | PR- |  | Ch - |
|  | Mute |  | Mute |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Back |  | Back |
|  | OK |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right/Zoom+ |  | Right |
|  | Left/Zoom- |  | Left |
|  | Red/[o] |  | Red |
|  | Green/Timer/List |  | Green |
|  | Yellow |  | Yellow |

 



 

 


 



 
 

 
 
 
 







 


 


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------|
|  | Blue/[] |  | Blue |
|  | Info |  | Info |
|  | Text |  | Text |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0/-/-- |  | 0 |
|  | AV |  | AV |
|  | SP/LP |  | Media |
|  | Play |  | Play |
|  | >> |  | >> |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|--------|
|  | Power |  | Power |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | PR+ |  | Ch + |
|  | PR- |  | Ch - |
|  | Exit |  | Exit |
|  | Menu |  | Menu |
|  | Back |  | Back |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right/Zoom+ |  | Right |
|  | Left/Zoom- |  | Left |
|  | OK |  | Ok |
|  | Red/[o] |  | Red |
|  | Green/Timer/List |  | Green |
|  | Yellow |  | Yellow |

 



 

 



 



 

 

 
 
 







 


 


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------|
|  | Blue/[] |  | Blue |
|  | Info |  | Info |
|  | Text |  | Text |
|  | Play |  | Play |
|  | Stop |  | Stop |
|  | Rec |  | Rec |
|  | Pause |  | Pause |
|  | >> |  | >> |
|  | << |  | << |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |


 
 
 
 
 
 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|--------|
|  | Power |  | Power |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | PR+ |  | Ch + |
|  | PR- |  | Ch - |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Back |  | Back |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right/Zoom+ |  | Right |
|  | Left/Zoom- |  | Left |
|  | OK |  | Ok |
|  | Red/[o] |  | Red |
|  | Green/Timer/List |  | Green |
|  | Yellow |  | Yellow |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------|
|  | Blue/[] |  | Blue |
|  | Info |  | Info |
|  | Text |  | Text |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0/-/-- |  | 0 |
|  | AV |  | AV |
|  | SP/LP |  | Media |
|  | Play |  | Play |
|  | Stop |  | Stop |



