

 


 












 













 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		MUTE
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Pause		Pause
	Fav		VOD
	Sat		-./- / EPG
	Recall		P/C / FAV
	Menu		MENU

**Originalfernbedienung    Ersatzfernbedienung**

	i		INFO
	EPG		MEDIA
	Exit		EXIT
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Ok		OK
	TV / Radio		TV/R
	Zoom		WIDE
	Prog-		CH -
	Prog+		CH +
	F1		OPT+
	P/N		BACK
	Text		TEXT
	Subtitles		Subt.
	Red / Audio		Red (A)



