

 
 




 


 


 

 

 

 










 

 
 

 

 
 
 

 

 




**Originalfernbedienung    Ersatzfernbedienung**





	Power		Power
	Mute		MUTE
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Pause		Pause
	Fav		VOD
	Sat		-/-- / EPG
	Recall		P/C / FAV
	Menu		MENU

**Originalfernbedienung    Ersatzfernbedienung**

	i		INFO
	EPG		MEDIA
	Exit		EXIT
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Ok		OK
	TV / Radio		TV/R
	Zoom		WIDE
	Prog -		CH -
	Prog +		CH +
	F1		OPT+
	P/N		BACK
	Text		TEXT
	Subtitles		Subt.
	Red / Audio		Red (A)




**Originalfernbedienung   Ersatzfernbedienung**

	Audio		Audio
	Green / Mosaic		Green (B)
	Yellow / Clock		Yellow (C)
	Blue / Text		Blue (D)
	TV/SAT		SRC
	Vol -		VOL -
	Vol +		VOL +
	Page +		Last
	Page -		First
	Page -		Rewind
	Page +		Fast Forward
	UHF		V-FOR
	PIP		Shift + V-FOR

**Originalfernbedienung   Ersatzfernbedienung**