




 
 


 

 
 

 
 
 


 
 
 
 

 

 

 


 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|-------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Audio |  | Dual |
|  | Recall |  | Back |
|  | Tv Menu |  | Menu |
|  | Source |  | AV |
|  | ChList |  | List |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|----------------|
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Ok |  | Ok |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Sound |  | Shift + Dual |
|  | Pic |  | Shift + Format |
|  | Ch+ |  | Ch + |
|  | Ch- |  | Ch - |
|  | Sleep |  | Sleep |
|  | Aspect |  | Format |
|  | Freeze |  | Eject |
|  | Tv/Radio |  | TV/R |
|  | Text |  | Text |



