


 

 
 

 
 
 

 

 

 

 

 
 
 


 

 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Recall		Back
	Tv Menu		Menu
	Source		AV
	ChList		List

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok		Ok
	Vol+		Vol +
	Vol-		Vol -
	Sound		Shift + Dual
	Pic		Shift + Format
	Ch+		Ch +
	Ch-		Ch -
	Sleep		Sleep
	Aspect		Format
	Freeze		Eject
	Tv/Radio		TV/R
	Text		Text





Originalfernbedienung Ersatzfernbedienung

	Epg		Guide
	Fav		Pre Ch
	Info		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Reveal		Media
	Hold		D. Menu
	Index	+	Shift + Info
	Subpage	+	Shift + AV
	List		Smart
	Mix		Options
	Subtitle		Subt
	Size		3D
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec/Rep		Rec

