




















 


 



 
 













 

 





 

 

 






 
 
 
 




Originalfernbedienung	Ersatzfernbedienung
	 Power
	 TV/R
	 AV
	 Mute
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Exit
	 Menu

Originalfernbedienung	Ersatzfernbedienung
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Info
	 Dual
	 Subt
	 Guide
	 Text
	 Back
	 Pause
	 List





Originalfernbedienung	Ersatzfernbedienung
	 Power
	 TV/R
	 AV
	 Mute
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Shift + Guide
	 Menu
	 Exit

Originalfernbedienung	Ersatzfernbedienung
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Info
	 Dual
	 Subt
	 Guide
	 Text
	 Back
	 Pause
	 Options



