

 

 
 
 



 


 

 




 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Source		AV
	*/Zoom		Eject
	DR+/Pop-Up M.		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Home		Smart

**Originalfernbedienung    Ersatzfernbedienung**



 
 
 
 
 



 
 



 

 



 

 
 

 

 





	PIP/[ ]		3D
	Text/Disc M		Text
	Menu		Menu
	Back/End		Back
	Info		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

**Originalfernbedienung    Ersatzfernbedienung**



 
 


 

 

 
 
 
 

 

 



 

 

 

 






	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Text/Disc M		Text
	EPG		Guide
	Home		Smart
	PIP/[ ]		3D
	Menu		Menu
	Back/End		Back
	Info		Info
	DR+/Pop-Up M		D. Menu
	*/Zoom		Eject
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue





 



 



 
 
 
 
 



 

 

 

 




 


 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	DR+/Pop-Up M		D. Menu
	*/Zoom		Eject
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Home		Smart

**Originalfernbedienung Ersatzfernbedienung**


 
 

 
 


 




 
 



 



 
 
 

 
 

 

 

	PIP/[ ]		3D
	Text/Disc M		Text
	Menu		Menu
	Back/End		Back
	Info		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow







 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Up		Up
	OK		Ok
	Down		Down
	Right		Right
	Left		Left
	*/Zoom		Format
	DR+/Pop-Up M		Media
	0		0
	Pip/[ ]		3D
	Menu		Menu
	Back/End		Back
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +

Originalfernbedienung Ersatzfernbedienung

	P-		Ch -
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<

