 





 

 

 



 



 

 

 

 

 











Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	Control		Smart / List
	[i+]		Info / Angle
	P.Info		Shift + Info / Angle
	ATV		Shift + Display / Media
	DTV		Display / Media
	SAT		Shift + 0
	Radio		TV/Radio /
	Power Ext. Media		Shift + Power
	←		Shift + Left
	Pause		Pause / Step / Freeze
	→		Shift + Right
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec Stop		Shift + Rec / Rec Mode

 













 








 


 

 

 



Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Fav / Marker / PC
	0		0
	Source		AV / Input / RDS
	AV Mode		Shift + AV / Input / RDS
	[<>]		Picture / Format



 











 



 







**Originalfernbedienung    Ersatzfernbedienung**

	APP		Shift + Green / APP /
	Eco		Setup / OPT /
	I/II/I+II/▼/O)		Audio / Lang I/II
	Vol+		Vol+
	P+		CH+ / Page+
	[≡]		Text / Goto
	Mute		Mute / Dimmer
	Vol-		Vol-
	P-		CH- / Page-
	Menu		Menu / Home
	3D		Shift + 3
	Home		Shift + Menu /
	EPG		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right

**Originalfernbedienung    Ersatzfernbedienung**

	End		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	[...]		Subtitle / EQ
	[≡?]		D.Menu / Top
	[≡O]		Sleep / Timer
	[≡+]		Shift + Stop /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

