 





 



 



 



 

 

 

 

 

 

 

 

 

 









 

 









 













Originalfernbedienung Ersatzfernbedienung

|   |               |   |                             |
|---|---------------|---|-----------------------------|
|    | Power         |    | Power                       |
|    | Eject         |    | Eject / Surround            |
|    | Tv/Radio      |    | TV/Radio /                  |
|    | Red/Goto      |    | Red / Netflix / Search      |
|    | Green/Angle   |    | Green / APP / Repeat        |
|    | Yellow/Repeat |    | Yellow / YouTube / Repeat   |
|    | Blue/A-B      |    | Blue / Prime Video / Random |
|    | FAV           |    | Fav / Marker / PC           |
|    | Text          |    | Text / Goto                 |
|    | Hold/Freeze   |    | Shift + Stop /              |
|   | D.Menu/Guide  |   | D.Menu / Top                |
|  | Subtitle      |  | Subtitle / EQ               |
|  | Zoom/Size     |  | Zoom / Size                 |
|  | Aspect        |  | Shift + Picture / Format    |
|  | Subpage       |  | Smart / List                |
|  | Media         |  | Shift + Display / Media     |
|  | Pause         |  | Pause / Step / Freeze       |



Originalfernbedienung Ersatzfernbedienung

|   |            |   |                       |
|---|------------|---|-----------------------|
|    | Play       |    | Play / Slow           |
|    | <<         |    | << / Tune-            |
|    | >>         |    | >> / Tune+            |
|    | D.Setup    |    | Setup / OPT /         |
|    | Rec        |    | Rec / Rec Mode        |
|    | Stop       |    | Stop / Hold           |
|    | I<<        |    | I<< / Preset-         |
|    | >>I/Index  |    | >>I / Preset+         |
|    | Menu       |    | Menu / Home           |
|    | Up         |    | Up                    |
|   | Lang/Audio |   | Audio / Lang I/II     |
|  | Left       |  | Left                  |
|  | OK         |  | OK                    |
|  | Right      |  | Right                 |
|  | Sleep      |  | Sleep / Timer         |
|  | Down       |  | Down                  |
|  | Title/Exit |  | Exit / Cancel / Clear |







 





**Originalfernbedienung    Ersatzfernbedienung**

|   |         |   |                    |
|---|---------|---|--------------------|
|    | Vol+    |    | Vol+               |
|    | Mute    |    | Mute / Dimmer      |
|    | CH+     |    | CH+ / Page+        |
|    | Vol-    |    | Vol-               |
|    | Display |    | Display / Media    |
|    | CH-     |    | CH- / Page-        |
|    | 1       |    | 1                  |
|    | 2       |    | 2                  |
|    | 3       |    | 3                  |
|   | 4       |   | 4                  |
|  | 5       |  | 5                  |
|  | 6       |  | 6                  |
|  | 7       |  | 7                  |
|  | 8       |  | 8                  |
|  | 9       |  | 9                  |
|  | -/--    |  | Guide / EPG / -/-- |
|  | 0       |  | 0                  |

**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |                  |
|---|--------|---|------------------|
|  | Recall |  | Back / Return    |
|  | Source |  | AV / Input / RDS |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title    |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |

