




 
 

 
 


 



 
 
 



 



 






 
 


 
 
 
 
 




 

 

 
 
 
 
 

 
 

 

 

 



 




Originalfernbedienung Ersatzfernbedienung








 

 




 


 




 
 
 


	Power		Power
	Tv/Radio		TV/R
	Subtitle		Subt
	AD/PIP/*		Shift + Subt
	TV/PC		Media
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List

Originalfernbedienung Ersatzfernbedienung

	Q.View		Smart
	FAV		Pre Ch
	Guide		Guide
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Text		Text
	Info		Info
	T.Opt		Shift + Options
	Settings		Options
	Q.Menu		Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Right		Right
	Left		Left
	OK		Ok
	Simplink		D. Menu
	Rec/*		Rec
	Stop		Stop
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

