 

 
 

 


 

 

 

 
 
 

 

 
 

 

 

 

 
 
 
 
 
 



 




 



 
 

 


 


 




 


 

 


 




 




 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv	 + 	Shift + Power
	Open/Close		Eject
	DVD		Red
	Video		Green
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-- Tv		Guide
	-/--	 + 	Shift + Guide

Originalfernbedienung Ersatzfernbedienung

	1 Tv	 + 	Shift + 1
	2 Tv	 + 	Shift + 2
	3 Tv	 + 	Shift + 3
	4 Tv	 + 	Shift + 4
	5 Tv	 + 	Shift + 5
	6 Tv	 + 	Shift + 6
	7 Tv	 + 	Shift + 7
	8 Tv	 + 	Shift + 8
	9 Tv	 + 	Shift + 9
	0 Tv	 + 	Shift + 0
	Clear		Exit
	Prog/Tracking+		Ch +
	Prog/Tracking-		Ch -
	Prog+ Tv	 + 	Shift + Ch +
	Prog- Tv	 + 	Shift + Ch -
	Vol+		Vol +
	Vol-		Vol -


 

 






 
 




Originalfernbedienung Ersatzfernbedienung

	Muting/Zoom		Mute
	Muting/Zoom Tv	 + 	Shift + Mute
	Set Up		Options
	Surround		Format
	Repeat/Index		Text
	Tv/Video		TV/R
	Tv/Video Tv	 + 	Shift + TV/R
	Subtitle/Timer		Subt
	Audio		Dual
	Angle		3D
	Input Select		AV
	←/Replay		Yellow
	→/Skip		Blue
	<</<I		<<
	>>/>I		>>
	I<</Shuttle Prev		I<<
	>>I/Shuttle Next		>>I

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	SP/LP		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Display		Info
	Top Menu	 + 	Shift + Menu
	Menu		Menu
	Return		Back

