



 

 




 







 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	i		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input Select		AV / Input / RDS
	Picture Size		Picture / Format
	Guide (EPG)		Guide / EPG / -/--
	Mute		Mute / Dimmer
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Vol +		Vol+
	Vol -		Vol-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH List		Smart / List
	Enter / CH List		OK
	P +		CH+ / Page+
	P -		CH- / Page-
	Audio I/II		Audio / Lang I/II
	Text		Text / Goto
	P <--> P		Fav / Marker / PC
	[≡?]		TV/Radio /
	Subtitle		Subtitle / EQ
	Freeze		Pause / Step / Freeze



