

 



 

 
 

 

 



 




 

 

 


 


 
 
 
 

 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DTV/VCR		AV / Input / RDS
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Recall		Back / Return
	Menu		Menu / Home
	EPG		Guide / EPG / -/--



 

 

Originalfernbedienung Ersatzfernbedienung

	Page+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	FAV		Fav / Marker / PC
	Page-		CH- / Page-
	Up/CH+		Up
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Down/CH-		Down
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Audio		Audio / Lang I/II
	Blue		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	TTX		Text / Goto
	Subtitle		Subtitle / EQ
	Tv/Radio		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

